

Configuring Motorola barcode scanners

1 Pairing the scanner with the cradle

- Scan the code on the cradle.
- Put the scanner into the cradle.
- A beep confirms successful pairing.

IMPORTANT

Only wireless scanners need to be paired!

PLEASE NOTE

You need to configure your Motorola barcode scanner only if it has NOT been supplied by Atemschutztechnik MENZL!

Barcode scanners supplied by Atemschutztechnik MENZL come preconfigured to work with our barcodes and the MENZL Equipment Management program.

2 Scan the codes on the right from top to bottom.

Set Defaults




Enable Parameter Scanning



Enable Interleaved 2 of 5




Disable Beep on Insertion

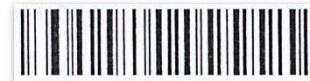

Beeper Configuration



Disable Parameter Scanning

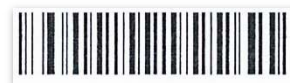

3 Enable the transmission of data via a virtual serial port (CDC).

IMPORTANT

You need to install the Motorola CDC driver (32 bits or 64 bits – depending on your operating system) before scanning the codes on the right.

Enable Parameter Scanning



Enable CDC Mode



4 Set up the barcode scanner in the MENZL Equipment Management program.

Errors and omissions excepted! Subject to change without notice!

